






BMW Quick-Release Module Installation Guide BMW快拆模块说明

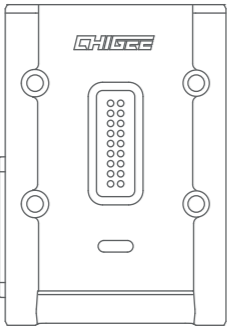

Mpack0289


1. Disassemble the Ball-Head Base (移除标配球头底座)

Remove the standard ball-head mount from the AIO-6.
移除 AIO-6 标配球头底座。

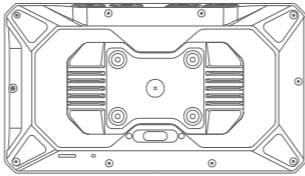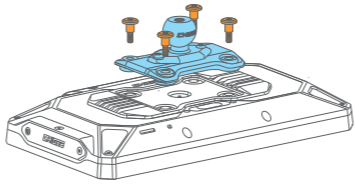


2.Install BMW Quick-Release Module (安装宝马快拆模块)

Install the BMW quick-release module onto the main unit and tighten the screws. (Recommended torque: 2.5 Kgf·cm)
将宝马快拆模块安装至AIO-6背部，并锁紧螺丝。
(建议螺丝扭矩： 2.5 Kgf·cm)

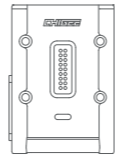



Screw Torque: 2.5 Kgf·cm
螺丝扭矩： 2.5 Kgf·cm

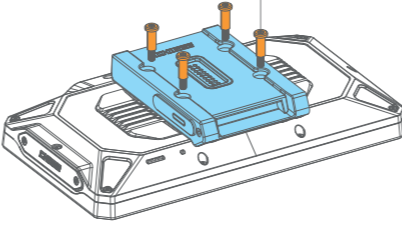

*The screws are pre-coated with thread locker.
*螺丝已预涂螺纹紧固剂

3.Install the AIO-6 onto the BMW Motorrad Base (将AIO-6安装至BMW Motorrad底座)

Install the AIO-6 onto the BMW Motorrad base.Ensure a secure installation to prevent the unit from falling due to looseness.
将已安装宝马快拆模块的AIO-6安装至BMW Motorrad底座，请检查是否安装牢固，避免因松动而导致掉落风险。

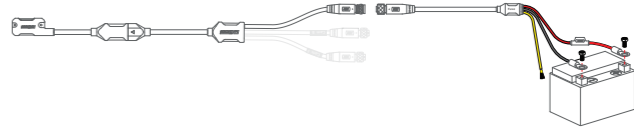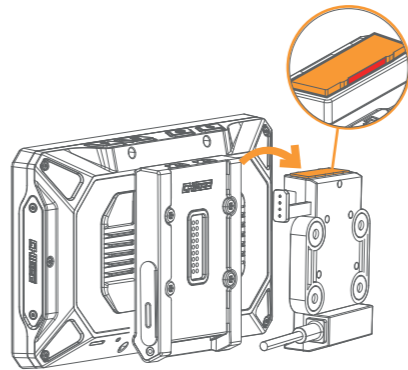

***AIO-6 MAX**
If the camera kit is not selected, the BMW quick-release cable does not need to be installed.
在未选装摄像头套装情况下，无需安装宝马快拆线束。

***AIO-6 LTE**
The BMW original quick-release base will be completely powered off after the vehicle is turned off. Regardless of whether a camera is installed, please ensure that the BMW quick-release cable is connected to the BMW quick-release module's Type-C port and plugged into the power cable. Failure to do so may affect vibration alarm notifications and remote live streaming functions.
因宝马原厂快拆底座在车辆熄火后将完全断电。无论是否选装摄像头，建议将宝马快拆线连接至宝马快拆模块的Type-C接口，并接入电源线，否则将影响震动报警推送和远程直播功能。

4.Access the camera (接入摄像头)

Connect the camera quick-release cable to the front/rear camera and the vehicle battery.
将宝马快拆线束与车辆电瓶、前/后摄像头进行连接。

① Identify the front camera from rear cameras according to the label
根据标识区别前后摄像头

Cam A Front Camera (前摄像头)
Cam B Rear Camera (后摄像头)

② Align the connector with the ▲ mark before plugging it in. Then, insert and tighten the nut
插线时接头对准 ▲ 标识后插入，并拧紧螺母




④ Fuse box (3A)
保险盒 (3A)

⑤ Red line connected to the positive pole of the vehicle battery
红线接车辆电池正极


⑥ Black line connected to the negative pole of the vehicle battery
黑线接车辆电池负极

⑦ Yellow line connected to the vehicle ACC
黄线接车辆ACC

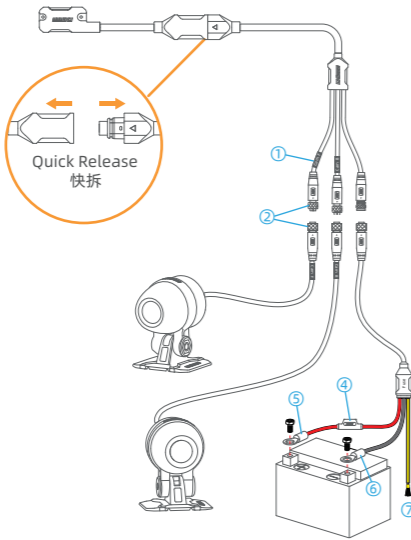

5.Connect and Secure the Camera Quick-Release Cable (将摄像头快拆线束安装至宝马快拆模块)


Insert the camera quick-release cable into the BMW quick-release module and tighten the screws.Avoid Frequent Disassembly. (Recommended screw torque: 1.8 Kgf·cm)
将摄像头快拆线束的Type-C口端插入宝马快拆模块，并拧紧螺丝，请避免频繁拆卸。（建议螺丝扭矩： 1.8 Kgf·cm）

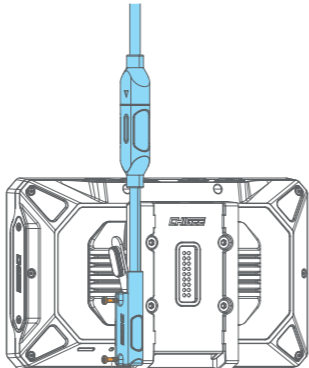

*Tighten the screws
*拧紧螺丝

6.Install the AIO-6 onto the BMW Motorrad Base (将AIO-6安装至BMW Motorrad底座)

Install the AIO-6 with the BMW quick-release module and BMW quick-release cable onto the BMW Motorrad mount.Ensure a secure installation to prevent the unit from falling due to looseness.
将已安装宝马快拆模块和宝马快拆线束的AIO-6安装至BMW Motorrad底座，请检查是否安装牢固，避免因松动而导致掉落风险。

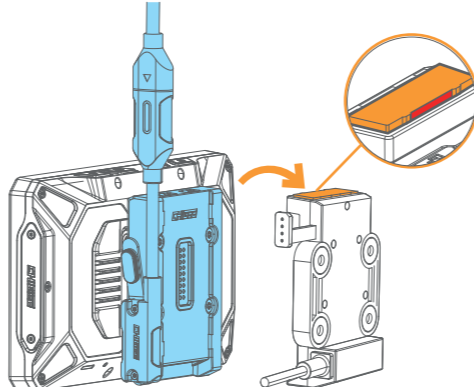

Parameters (参数)

Product Name/名称	BMW Quick Release Base/宝马快拆模块
Dimensions/尺寸	55x14x80mm
Material/材质	PA66

Manual content may be updated without prior notification.
说明书内容如有更新，恕不另行通知

Makers/メーカー/제작자/Hersteller/creator/ производители: CHIGEE Technology Co.,Ltd
Address/住所/주소/Adresse/адрес: Building 5, Lingya Industrial Park, No. 1 Tangtou Road, Bao'an District, Shenzhen, China.
CHIGEE is a trademark of CHIGEE Copyright ©2021CHIGEE All Rights Reserved

本产品由深圳市腾技科技有限公司授权生产
地址：深圳市宝安区石岩街道领亚美生智慧绿谷5栋
执行标准：GB4943.1-2022

